


MP3 OTIS PLAYER QUICK USER GUIDE

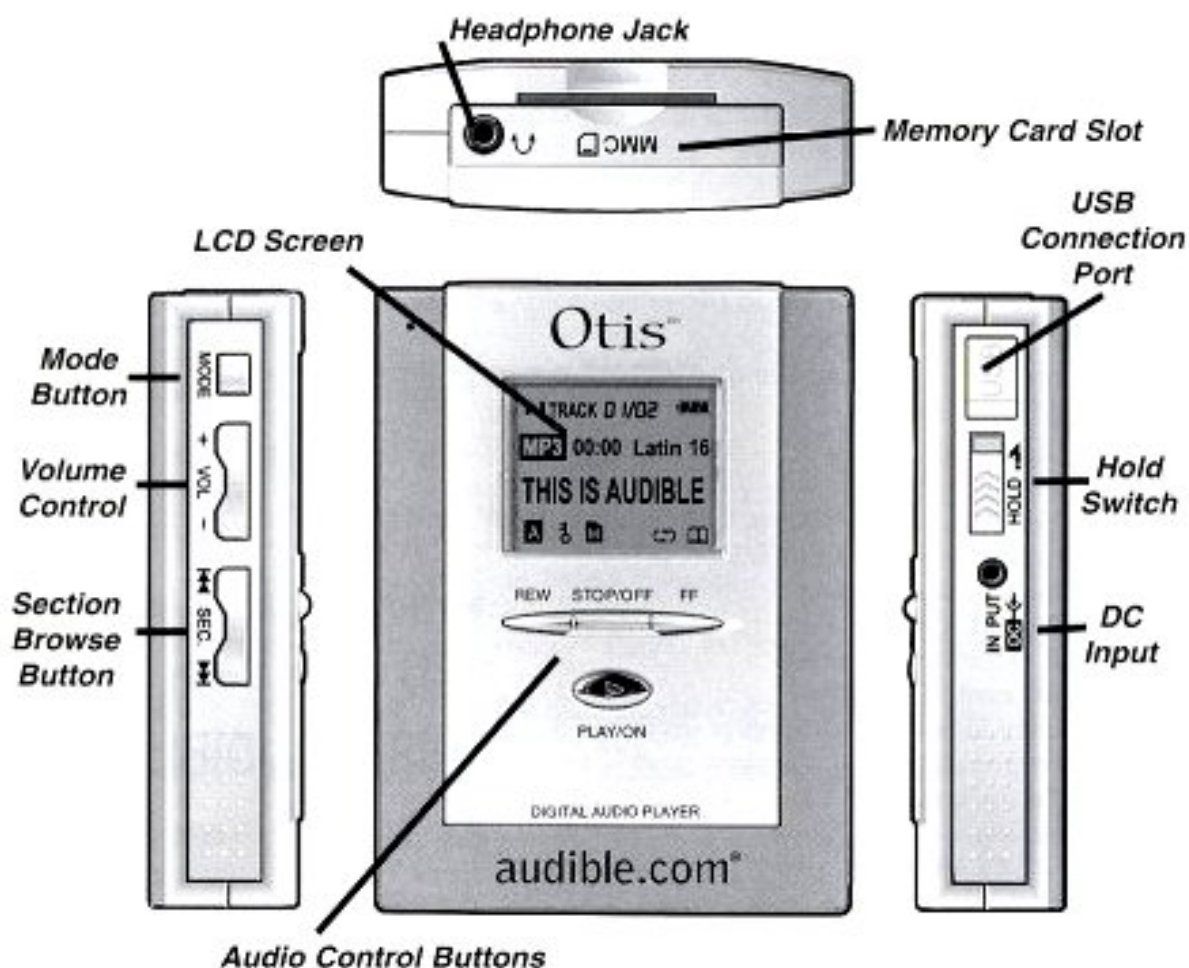

PLAY/ON button

Press **PLAY/ON** button & hold for 2 seconds to switch on Otis

Press **PLAY/ON** button again to start playback.

During playback press **PLAY/ON** button once to pause and press play again to resume playback.

During playback press & hold **PLAY/ON** button for 2 seconds to insert a bookmark.

STOP/OFF button

Press **STOP/OFF** button to halt playback, press **PLAY/ON** to resume playback.

Press & hold **STOP/OFF** button for 2 seconds to turn the player off.

Fast Forward button

IF **FF** button pressed, audio will skip forward.

IF **FF** pressed and held, audio will skip forward at greater speed.

Rewind button

IF **REW** button pressed, audio will skip backwards.

IF **REW** pressed and held, audio will skip backwards at greater speed.

Volume button (left side panel)

Pressing top of **VOLUME** button (+) will increase volume.

Pressing bottom of **VOLUME** button (-) will decrease volume.

Section navigation (left side panel)

Pressing top of **SEC** button will proceed to the next section

Pressing bottom of **SEC** button will return to the previous section

Mode button (left side panel)

The mode button will allow the user to customise their listening preferences. Pressing mode will allow a choice of:

- **Music Play mode** - used to select the order of playback for audio files.
- **Audible mode** - used to delete bookmarks & playback position marks in audio files.
- **Equalizer mode** - used to adjust sound settings & levels
- **Firmware mode** - a diagnostic tool for data communication

Bookmarks

To place a bookmark simply press & hold the **PLAY/ON** button until you see a bookmark number on the screen. You can place up to 20 bookmarks.

To navigate back to a bookmark press & hold the **MODE** button (left hand panel). You will return to the first bookmark, press **FF** to move through the other bookmarks.

LCD Display

- 1) Play
- 2) Pause
- 2) Current Status (MP3/WMA file)
- 4) Current track play time
- 5) AUDIBLE play file
- 6) HOLD switch enable
- 7) MMC card PLAY mode
- 8) Display Title
- 9) Current track number
- 10) Total track number
- 11) Equalizer
- 12) REPEAT mode
- 13) Battery status
- 14) BOOKMARK
- 15) VOLUME

